

**AutoLight will not turn on.**

Firstly, ensure batteries are correctly inserted. If they are, they may have discharged. Replace the batteries, and check the battery fittings. If the light tester will still not turn on, the internal electronics may have failed - return unit for servicing.

**AutoLight wont stay on.**

The lamp only stays illuminated for approx 3 secs, then a result is shown.

**The light globe is not working.**

Return unit for servicing.

**AutoLight turns itself off during use.**

The batteries may have discharged. Replace the batteries.

**My AutoLight briefly flashed an incorrect reading and then switched off quicker than normal.**

The batteries in your unit are low and don't have enough charge to power the unit, please replace BOTH with appropriate, matching batteries.

**How long does a battery last?**

Many hundreds of tests.

**Can I use a rechargeable battery?**

No. Rechargeable batteries have lower voltage and are not suitable.

**How often do I need to calibrate my AutoLight Tester?**

The AutoLight needs to be calibrated every 12 months.

**How long does it take to calibrate my AutoLight?**

It takes one day to calibrate an AutoLight (excluding shipping and repairs).

**Where do I send my AutoLight for calibration?**

Send it to AutoTest Products (see contacts) or your local distributor.

**What should I send when my AutoLight needs service and calibration?**

Please send your AutoLight, business card and contact details.

**How long does my warranty last?**

12 months parts and labour. 3 months parts and labour for repairs.

**Can I get a longer cord?**

Yes. A longer cord can be purchased as an optional extra, which is double the length. The unit must be recalibrated after the modification.