

**Why the unit turns off once connected to the charger?**

This is normal. Please turn off the meter before putting it to charge.

**Can I change the batteries?**

No. The batteries are soldered on the circuit board. Please send to AutoTest Products if your batteries are at fault.

**How do I turn the power on my printer?**

Press and hold POWER button down for 2-3 seconds, or until the power indicator light turns red.

**Why the bluetooth printer is not connecting?**

When connecting, it takes time for the printer to pair, up to 20 seconds. You will see the blue light flashing when it has paired. Restart the bluetooth printer and make sure it is charged up.

**My print-outs are printing faded. What should I do?**

This means that the printer is almost flat. Charge you printer, and it will print darker.

**What does the blue blinking light on my printer mean?**

That the battery is almost flat, the power indicator blinks in a blue colour. This means you must CHARGE the battery.

**How do I correctly charge my printer?**

Refer to your Printer User Manual point 3.2.7 BATTERY CHARGING on your USB stick, or download from our website - <https://autotest.net.au/product/autostop-mini-plus-brake-meter/>

**Can I use the printer while charging it?**

Yes you can.